ACCESSORIES THINNER METERING SYSTEM MONO



Mounted to pad printing machine HERMETIC 6-12 universal

Illustration:

Option for your "hermetic" pad printing machine

Constant viscosity of the pad printing ink

Production safety – Continuous printing quality



Pad Printing Machines ALFALAS[®] Laser Systems Automations


Assembly Thinner Metering System Mono:




A. Connect flexible hose (1) with right and left connecting nipples (2 + 3) to the clamp ratchet (4).




B. Tilt clamp ratchet (4) to the right and lock in place by means of the tension lever (5).

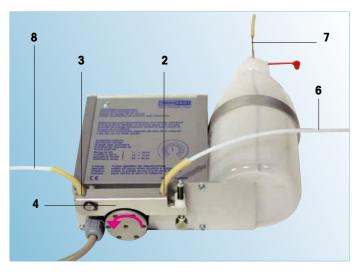

- **C.** Mount supply hose (6) with hose connection to supply bottle (7) and to the right connecting nippel (2) of the clamp ratchet (4).
- D. Mount discharge hose (8) with hose connection to the left connecting nippel (3) of the clamp ratchet (4).

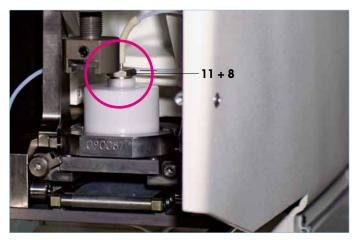

III.: Discharge hose (8) is mounted to the ink/doctoring cup (12) by means of sealing plug (11)

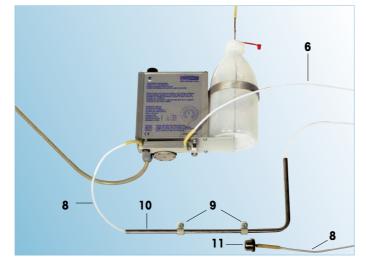


- E. Slide cable clips (9) on the pipe (10).
- F. Attachment to pad printing machine: Mount pipe (10) to the left machine side. Always mount thinner-metering system below level of ink/doctoring cup (bore holes available).
- **G.** Push the discharge hose (8) through the pipe (10).
- H. Attach hose connection to discharge hose (8).
- I. Screw sealing plug (11) on top of ink/doctoring cup (12).
- K. Attach discharge hose (8) to sealing plug (11).
- L. Plug the mains cable of the thinner-metering system directly in the power socket of the machine. (Attention: Please observe the note on page 4).
- M. Switch-on machine and start with the adjustment of the dosage (see page 4).

Spare parts:

Item No.	Quantity	Description	Item No.	Quantity	Description
23 14 21	2	Socket head cap screw	23 96 39	1	Fuse holder
23 23 17	2	Socket head cap screw	23 96 41	1	Supply bottle cpl.
23 37 20	2	Cable clip 0,8 mm	23 96 42	1	Holder supply bottle
23 96 29	1	Motor with gear	23 96 43	1	Sealing plug doctoring cup
23 96 30	1	Fine-wire fuse	23 96 44	1	Tension lever cpl.
23 96 31	1	Housing cpl.	23 96 45	1	Bearing shaft ratchet initial tension
23 96 32	1	Regulating potentiometer	23 96 46	1	Rotor with squeeze rolls
23 96 33	1	Switch ON/OFF	23 96 47	1	Clamp ratchet
23 96 34	1	Power unit	23 96 48	1	Bearing shaft clamp ratchet
23 96 35	1	Power socket with plug	23 96 49	1	Hose connection with plug nipple
23 96 36	1	Pointer knob regulating potentiometer	23 96 50	1	Hose connection
23 96 37	1	Flexible hose with plug nipple	23 96 52	1	Pipe "hermetic" systems
23 96 38	2	Supply/discharge hose			



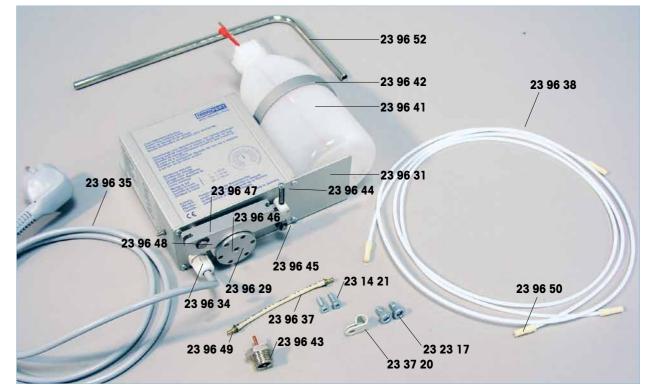



ORIGINAL TAMPO PRINT

Installation example:



III.: Example Thinner-metering system "hermetic" mounted to pad printing machine

Installation / Note:

- If possible, use the 230 V power supply that is directly on your pad printing machine, power supply will be automatically interrupted. Otherwise there is the risk that your ink/doctoring cup will overflow due to further supply of thinner.
- If your pad printing machine doesn't have 230 V power supply and you are using an external 230 V power supply, then the thinnermetering system MUST be immediately switched-off manually in case of a machine STOP!
- In case of a machine STOP (not in operation) release the tension lever
 (5) of the clamp ratchet (4).
- Fill ink/doctoring cup only up to 3/4 with pad printing ink.

Adjustment of the dosage:

Dosing quantity varies depending on: Machine cycle speed, ink type used and room temperature. The dosage is continuously selectable from 1–31. Example:

1 \triangleq Flow rate of approx. 10 ml thinner in 8 h operation 15 \triangleq Flow rate of approx. 15 ml thinner in 8 h operation 30 \triangleq Flow rate of approx. 30 ml thinner in 8 h operation



TAMPOPRINT® AG

 Lingwiesenstraße 1

 70825
 Korntal-Münchingen, GERMANY

 Ø
 +49 7150 928-0

 Fax:
 +49 7150 928-400

 E-Mail:
 info@tampoprint.de

 Ventes
 et Affaires Françaises

 Ø
 +49 7150 928-144

 Fax:
 +49 7150 928-144

 Fax:
 +49 7150 928-432

 E-Mail: ventes@tampoprint.de

 http:
 www.tampoprint.de

TAMPOPRINT[®] INTERNATIONAL CORP.

 1400 26th Street, Vero Beach, FL 32960, USA

 @
 +1 772 778-8896, 800 810-8896

 Fax:
 +1 772 778-8289

 E-Mail:
 sales@tampoprint.com

 http:
 www.tampoprint.com

TAMPOPRINT® IBERIA S.A.U.

 Polígono Industrial Martorelles,

 C/ Sant Martí, s/n (entre Gorgs y Mogent)

 08107
 Martorelles (Barcelona), SPAIN

 Ø
 +34 93 2327161

 Fax:
 +34 93 2471500

 E-Mail:
 tampoprint@tampoprint.es

 http:
 www.tampoprint.es

The reproduction of trademarks and brands used in this brochure, even if not explicitly expressed, does not justify the assumption that such names or symbols may be considered as free as defined by the Trademark Act and may therefore freely be used. The rights are the property of the respective owner.

TAMPOPRINT products are permanently updated to keep pace with the latest technological developments. For this reason, figures and descriptions are non-binding. Manufactured according to EC Directive 98/37/EC.

Subject to alterations! ©Copyright